



# ENLIVEN

Adjustable Base Assembly and Operation Manual

PLEASE READ THESE INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE REFERENCE

## CONTENTS

Safety precaution and usage guide .....	3
Parts list .....	5
Base overview .....	6
Assembly guide .....	7
Operating your adjustable base .....	10
Wireless remote pairing operation .....	11
Split-base synchronisation .....	11
Power outage .....	12
Headboard bracket installation .....	12
Adjustable base guarantee .....	14

## REGISTER YOUR PRODUCT PURCHASE

Registering your product purchase with us will help us to provide faster service should you need to contact us in the future.

**[ahbeard.com/customer-care](https://ahbeard.com/customer-care)**

## SAFETY PRECAUTIONS AND USAGE GUIDE

**ATTENTION: MAKE SURE YOU READ ALL INSTRUCTIONS BEFORE USING YOUR ADJUSTABLE BASE.**

### SAVE THESE INSTRUCTIONS.

**To reduce the risk of electronic shock, burns, fire or injury to users, please follow these instructions:**

- Packing material may pose a choking or smothering hazard to small children, please dispose of immediately after unpacking.
- To avoid injury, do not operate your adjustable base with small children on or under your adjustable base.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug the base power cord from the power outlet before installing, servicing or cleaning any part of the base.
- Before disconnecting the power cable return the base to the flat position and stop all operations.
- Keep the power cord away from water and heated surfaces. Immediately stop use of the bed base and contact an authorised service centre if the base has gotten wet, has a damaged cord or plug, or if it is not working properly.
- Never operate the base when the air openings on the electronic system are blocked. Do not drop or insert any object into any opening.

- Do not use accessories/attachments that are not recommended by the manufacturer.
- If using a headboard, ensure it is installed against a wall to prevent from collapsing on persons, children or pets.
- Only use this bed base for its intended use as described in this manual.

### Guarantee Warning:

Do not unscrew, open or tamper with motors, remote control (except battery compartments), or any other electronic components. Any alterations to components will not be covered by warranty. For complete guarantee information refer to page 14.

### In-Home Use and Hospital Disclaimer:

This adjustable bed base is designed for in-home use only. This base was not designed for use outdoors or in hospitals and is not designed to meet medical standards. Do not use with or near oxygen therapy equipment, aerosol spray products or near explosive gases.

Do not use the optional massage function on your adjustable base if you have an artificial cardiac pacemaker before consulting your physician.

### Restrictions:

The lift motors are not designed to operate continuously for more than two (2) minutes in an eighteen (18) minute time period or approximately 10% duty cycle. The optional massage function should not be operated for more than two (2) hours within a six (6) hour period.

### **To keep your adjustable base performing well for its lifetime:**

#### **Do:**

- When replacing batteries in your remote control remove full set of old batteries and replace with a full new set.
- Remove the batteries from your remote control and motor if your adjustable base will not be used for a long period of time to prevent damage caused by battery leakage.
- Place your adjustable base on flat ground to avoid damage.
- Use a compatible mattress for your adjustable base. A memory foam mattress or latex mattress is recommended. Some spring mattresses or pocket spring mattresses, for example, may not be suitable for use on your adjustable base. Consult your mattress specialist to verify your mattress is compatible.

#### **Don't:**

- Sit on the head or leg section while in the raised position. It can damage your adjustable base.
- Lift or move the base during operation. It might cause damage to your base.
- Lift or move your adjustable base by holding the mattress platform. If it is necessary to lift or move your adjustable base, hold the cross bars of its metal frame.

### **Power Ratings:**

Input: AC100-240V 50/60Hz 1.5A

Output: DC29V 2.0A


Protection Class: Class II

## **SAVE THESE INSTRUCTIONS**

### **SERVICING OF DOUBLE-INSULATED PRODUCTS**

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-insulated product requires extreme care and knowledge of the system and is to be done only by qualified service personnel.

Replacement parts for a double-insulated product must be identical to the parts they replace. A double-insulated product is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED."

The symbol  is also able to be marked on the product

## PARTS LIST

**CHECK AND CONFIRM THE FOLLOWING ITEMS ARE INCLUDED IN THE CARTON BEFORE DISPOSING OF ANY PACKING MATERIALS.**



Remote control (1)



AC main cable (1)



Power supply (1)



Mattress retainer bar (1)



AAA batteries (3)



Legs (4)



Clip Locks (2)

## PARTS FOR INSTALLING HEADBOARD



Bolts for Headboard (8)



Nuts for Headboard (8)



Washers (16)




Headboard Brackets A (2)



Headboard Brackets B (2)

## BASE OVERVIEW

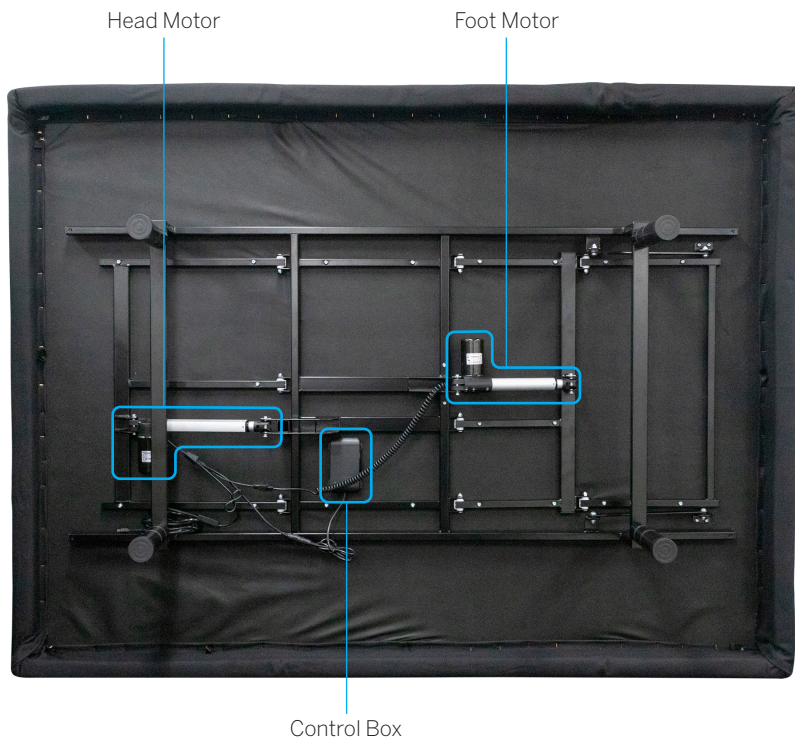

## ASSEMBLY GUIDE

### TWO PEOPLE ARE REQUIRED TO SET UP YOUR ADJUSTABLE BASE

#### STEP 1



Take the carton near to where you would like the base to be set up. Place the carton flat on the floor with the printed lid facing up.

When you open the carton, you will see that there are small boxes packed in with the base. These have various parts in them. Move these boxes to a safe place and then lift the base out with the underside of the base still facing upwards. Place in the desired location. Remove and dispose of any packing materials.

#### STEP 2



Take out the four base legs. Each leg is made up of three pieces that have various height options. You can use any, or all of, the leg pieces to achieve your desired leg height: 5", 2½", 2", or combine all three to achieve 9½".

Once the height is decided, secure the four legs onto your adjustable base. Ensure there is no gap between the leg and base.

#### STEP 3

Insert three AAA batteries into the compartment of the remote control.



## ASSEMBLY GUIDE

### STEP 4



Plug the 2 power cables into the power supply.

**IF YOU'RE ATTACHING A HEADBOARD, YOU WILL NEED TO ATTACH HEADBOARD BRACKETS. PLEASE COMPLETE STEPS ON PAGE 12 BEFORE CONTINUING WITH NORMAL INSTALLATION**

**IF INSTALLING A SPLIT-BASE PLEASE FOLLOW INSTRUCTIONS ON PAGE 11**

### STEP 5



With assistance carefully turn the adjustable base over onto its legs.


**TWO PEOPLE ARE REQUIRED WHEN TURNING THE BASE OVER. DO NOT APPLY EXCESSIVE PRESSURE. THE INSTALLED LEGS COULD GET DAMAGED OR BENT IF YOU LEAN YOUR ADJUSTABLE BASE ON THE LEGS.**

Note: Do not recline the base against the installed legs to flip it over. Do not drag the base across the floor.




## ASSEMBLY GUIDE

### STEP 6

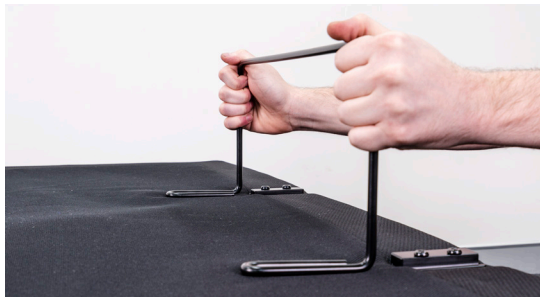

If your mattress does not have clip locks attached to its underside, you will need to install the retainer bar to keep it in position on your adjustable base. Slide the mattress retainer bar into the mount.

### STEP 7

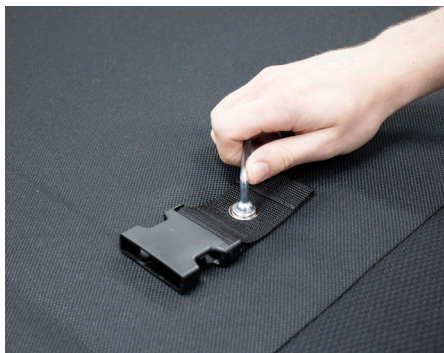

Install the clip locks using the provided allen key and place the mattress on the adjustable base. If you have purchased an A.H. Beard mattress with your adjustable base attach the male clip locks on the mattress to the female clip locks on the base.

### STEP 8

Plug the main cable into an electrical outlet. A surge protector (not included) is recommended to extend the life of your adjustable base.

### INSTALLATION IS COMPLETE

## OPERATING YOUR ADJUSTABLE BASE

Press and hold the button  
to RAISE BACK REST.  
Stops when released

Press and hold the button  
to RAISE LEG REST.  
Stops when released

Zero Gravity  
Preset Position

Memory Button for first  
preferred position

Memory Setup  
Button

Flash Light

Press and hold the button  
to LOWER BACK REST.  
Stops when released

Press and hold the button  
to LOWER LEG REST.  
Stops when released


Flat  
Preset Position

Memory Button for  
second preferred position

Floor LED Light



### SAVING YOUR FAVOURITE POSITIONS TO MEMORY:

1. Adjust the base to your preferred position.
2. Press and release the memory setup button. 
3. Press and release M1 or M2 buttons.
4. A confirmation beep should confirm your position has now been saved.

## PAIRING YOUR REMOTE & BASE

Your new base is already paired with the remote supplied. If the base does not initially operate, you may need to reconnect the remote and base following the instructions below.



1. Press the pairing button located on the back of the control box twice until the LED light turns on.
2. Once the LED light turns on, you now have 10 seconds to complete the pairing process. Press and hold the Raise back rest and Lower back rest buttons simultaneously until the LED light on the remote flows continuously.

### IMPORTANT NOTES:

If multiple bases are being used in the same house or area, each base should be configured with its own remote control. Do not pair both control boxes to the same remote or movement could occur on additional base unexpectedly.

Please repeat the above steps if the pairing operation failed.



## SYNCHRONISING TWO SPLIT BASES

If you have a split-base and require simultaneous operation of the two bases, you must first successfully pair the first base control box to your remote control using steps 1 and 2 from above. For the second base control box please follow the steps below.

- Press the pairing button located on the back of the control box twice until the LED light turns on.
- Once the LED light turns on, you now have 10 seconds to complete the pairing process. Press and hold the Raise leg rest and Lower leg rest buttons simultaneously until the LED light on the remote flows continuously.



## POWER OUTAGE

In the case of a power outage, insert two (2) 9V batteries (not included) into the battery compartment of the power supply. This option can be used as back up power to return your adjustable base to the flat position. Do not sit on the adjustable base or apply any load when using the back up battery power to return your base to the flat position.

## HEADBOARD BRACKET INSTALLATION

### STEP 1



Place headboard bracket B on the outside edge of the head of the base.

1. Put the bolt through the washer and insert in one side of the pre-drilled hole.
2. Place the nut and another washer on the other side of the pre-drilled hole.
3. Tighten the nut using the provided allen key and spanner.
4. Repeat steps 1 - 3 for all four bolts (2 per side).

## HEADBOARD BRACKET INSTALLATION

### STEP 2



The bracket A allows adjustment to meet the dimension of different headboards. After choosing desired pre-drilled holes on the bracket, pass the bolts with the washer through the holes on brackets. Fasten these bolts, washers and nuts using a wrench.

### STEP 3

Please refer to the mounting instructions of your specific headboard when attaching to these brackets.

## ADJUSTABLE BASE GUARANTEE

Congratulations on the purchase of your new A.H. Beard product. We are confident that it will provide years of sleeping comfort.

A.H. Beard has been setting the standard for quality bedding since 1899. However in the unlikely event that a product fails to meet our high standards, A.H. Beard offers a guarantee to the original purchaser to repair the product against faulty workmanship and materials for a period of 10 years.

In order to make a claim under this guarantee you must retain your original receipt as proof of purchase, and the product serial number, which can be found on the back of this leaflet or inside the battery compartment of the base remote control.

**For prompt service, please register your purchase on our website:  
[ahbeard.com/customer-care](http://ahbeard.com/customer-care)**

### **RIGHTS UNDER THE AUSTRALIAN CONSUMER LAW AND THE CONSUMER GUARANTEES ACT IN NEW ZEALAND**

The benefits given by the guarantee set out in this document are in addition to any other rights and remedies you may have under a law in relation to the goods to which the guarantee relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and the Consumer Guarantees Act in New Zealand. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **RIGHTS UNDER THIS GUARANTEE**

A.H. Beard provides the original purchaser of this product a guarantee against defects in workmanship and materials for a period of 10 years.

If, during the guarantee period, a defect caused by faulty workmanship or materials appears, A.H. Beard will repair your adjustable base within a reasonable time after receiving your valid guarantee claim. Note that the guarantee period applies to the original purchaser and commences on the date of purchase of this product.

A.H. Beard reserves the right to charge an up-front call out fee prior to an inspection taking place at any stage during the life of the base. This fee will be refunded should a manufacturing fault be discovered.

If identical materials are not available at the time A.H. Beard repairs your base under this guarantee, A.H. Beard reserves the right to substitute materials of comparable quality.

### **HOW TO CLAIM YOUR GUARANTEE**

If you want to make a claim under a guarantee in this document please contact A.H. Beard via one of the methods below

- By telephone in Australia on 1300 654 000
- By telephone in New Zealand on 0800 242 327

## ADJUSTABLE BASE GUARANTEE

- Online at [www.ahbeard.com/customercare](http://www.ahbeard.com/customercare)
- By email to [customer@ahbeard.com](mailto:customer@ahbeard.com)
- Mail in Australia to A.H. Beard Pty Limited, PO Box 41, Padstow NSW 2211
- Mail in New Zealand to A.H. Beard Pty Limited, 260 Roscommon Road, Wiri 2104

### HOW TO CLAIM YOUR OUT-OF-POCKET COSTS

Unless otherwise stated in this document, you will bear the cost of claiming under this guarantee. If you are entitled to claim labour or transportation costs, approved by A.H. Beard before they were incurred, and which directly relate to the repair of the base, please send your receipt as proof of payment of these costs to:

A.H. Beard Pty Limited, PO Box 41, Padstow NSW 2211 if you are located in Australia. A.H. Beard Pty Limited, 260 Roscommon Road, Wiri 2104 if you are in New Zealand.  
A.H. Beard will then reimburse you for the costs incurred.

### ADDITIONAL TERMS

#### THIS GUARANTEE DOES NOT COVER:

- Any defect or damage to the base as a result of:
  - i. mishandling, misuse or abuse of the adjustable base (including during transportation);
  - ii. any modification to the base which has been made without the prior written consent of A.H. Beard;
  - iii. repairs to or the replacement of a part by a person not authorised by A.H. Beard to perform the repair or replace the part;
  - iv. connection to an improper power supply;
  - v. the base being used in any environment or a commercial setting for which it was not intended.
- Any damage to mattresses, bed coverings, bedding cables, electrical cords or accessories supplied by retailers;
- The cost of service calls not expressly authorised by A.H. Beard for the purpose of educating you about the A.H. Beard Adjustable Base or to locate proper functioning power outlets;
- Normal wear and tear, or damage caused by mishandling, abuse, misuse or negligence including folding, bending, standing on or jumping on the base
- A base that, on inspection by A.H. Beard, is found to be stained or in an unsanitary condition

Except as expressly stated, this guarantee does not include any right to be reimbursed or compensated for physical or financial injury, loss, damage, expense, time or inconvenience (whether direct or indirect) arising out of the occurrence of the defect in the base or your inability to use the base.

Any use of this product other than the use for which it was originally intended is not the responsibility of A.H. Beard.



A.H. Beard Pty Ltd  
1/35 Bryant Street  
Padstow NSW Australia 2211  
Phone: 1300 654 000  
Email: [customercare@ahbeard.com](mailto:customercare@ahbeard.com)  
[www.ahbeard.com](http://www.ahbeard.com)

A.H. Beard Pty Ltd  
260 Roscommon Road  
Wiri Auckland New Zealand 2104  
Phone: 0800 242 327  
Email: [customercare@ahbeard.com](mailto:customercare@ahbeard.com)  
[www.ahbeard.com](http://www.ahbeard.com)